



About your projector

Remote control



■ Front

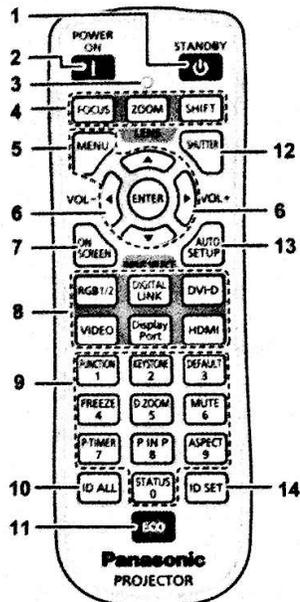

■ Top

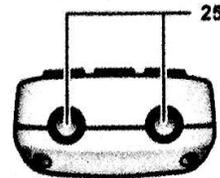

■ Bottom

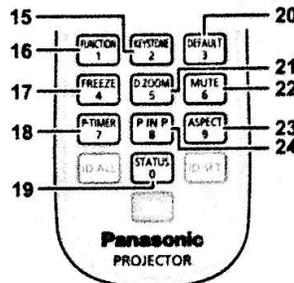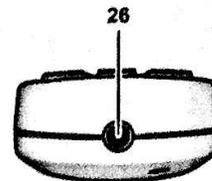

- 1 **Power standby <⏻> button**
Sets the projector to the state where the projector is switched off (standby mode) when the <MAIN POWER> switch on the projector is set to <ON> and in the projection mode.
- 2 **Power on <|> button**
Starts projection when the <MAIN POWER> switch on the projector is set to <ON> when the power is switched off (standby mode).
- 3 **Remote control indicator**
Flashes if any button in the remote control is pressed.
- 4 **Lens (<FOCUS>, <ZOOM>, <SHIFT>) buttons**
Adjusts the Projection Lens. (➡ page 49)
- 5 **<MENU> button/<ENTER> button/▲▼◀▶ button**
Used to navigate through the menu screen.
- 6 **<VOL-> button/<VOL+> button**
Adjusts the volume of the built-in speaker or audio output.
- 7 **<ON SCREEN> button**
Switches on (display)/off (hide) the on-screen display function.
- 8 **Input selection (<RGB1/2>, <DIGITAL LINK>, <DVI-D>, <VIDEO>, <DisplayPort>, <HDMI>) buttons**
Switches the input signal to project.
- 9 **Number (<0> - <9>) buttons**
Used when the system uses multiple projectors.
Used to input ID numbers or passwords.
- 10 **<ID ALL> button**
Used to simultaneously control all the projectors with a single remote control when using multiple projectors. (➡ page 29)
- 11 **<ECO> button**
Displays the setting screen relating to ECO management.
- 12 **<SHUTTER> button**
Used when temporarily turning off the image and audio.
- 13 **<AUTO SETUP> button**
Automatically adjusts the image display position while the image is projected.
[PROGRESS] is displayed on the screen while adjusting automatically.
- 14 **<ID SET> button**
Sets the ID number of the remote control to use for a system using multiple projectors. (➡ page 29)
- 15 **<FUNCTION> button**
Displays the [KEYSTONE] menu.
- 16 **<FREEZE> button**
Assigns a frequently used operation as a shortcut button.
(➡ Operating Instructions – Functional Manual page 57)
- 17 **<FREEZE> button**
Used when pausing the image and turning off the audio.
- 18 **<P-TIMER> button**
Operates the presentation timer function.
- 19 **<STATUS> button**
Displays the status of the projector.
- 20 **<DEFAULT> button**
Resets the content of the sub-menu to the factory default.
- 21 **<D.ZOOM> button**
Displays the [DIGITAL ZOOM] menu.
- 22 **<MUTE> button**
Used when temporarily turning off the audio.
- 23 **<ASPECT> button**
Switches the aspect ratio of the image.
- 24 **<P IN P> button**
Switches the [P IN P] setting.
- 25 **Remote control signal transmitter**
- 26 **Remote control wired terminal**
This is the terminal to connect to the projector by a cable when used as a wired remote control. (➡ page 30)

Attention

- Do not drop the remote control.
- Avoid contact with liquids or moisture.
- Do not attempt to modify or disassemble the remote control.